IMPORTANT TOY INFORMATION
Before rst use: Remove and discard the round white plug from the toy base, otherwise the toy will not function properly. The black box in the battery compartment contains button cell batteries for the “try me” function of this toy. This box should be removed by an adult prior to inserting fresh AAA (LR03) batteries.
• Button cell battery in product contains mercury. Do not put in trash. Recycle or dispose of as hazardous waste.

Before playing with your Dino-Mite, make sure fresh batteries are installed (see below).
If left alone, this toy will automatically shut off after one minute.

BATTERY SPECIFICATIONS
This toy requires (2) AAA (LR03) batteries (not included).

BATTERY SAFETY INFORMATION
• Only adults should install and replace batteries.
• Only use the speci ed battery types.
• Do not use rechargeable batteries.
• Do not try to recharge non-rechargeable batteries.
• Insert batteries correctly—match positive and negative signs.
• Do not place anything across the battery terminals.
• Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
• Do not mix old and new batteries.
• Remove dead or weak batteries.
• Dispose of batteries safely. Recycle them where possible.
• Do not dispose of batteries in a re. They may explode!

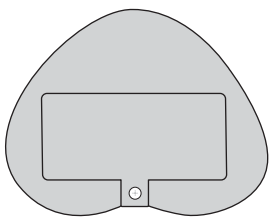
Fig. 1

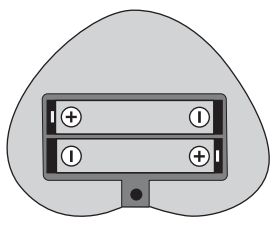
Fig. 2

TO INSERT BATTERIES
1. Loosen the single screw on the panel at the bottom of the toy and remove the cover (Fig. 1).
2. Correctly set 2 new AAA (LR03) batteries (Fig. 2).
3. Replace battery cover and tighten screw.

SAFETY WARNINGS
Parents and guardians, please read carefully.
• In case of liquid leakage, do not ingest. If liquid gets in eyes, ush eyes thoroughly with water and consult a physician. If liquid gets on clothes or skin, wash it off with water.
• Read the instruction manual carefully before playing. Also keep this manual.
• Do not forcefully press the buttons or twist the dome.
• Do not break into parts.
• Do not put this toy in water. It is not waterproof.
• Stop playing immediately if it breaks or malfunctions.
• This toy will not perform correctly when the batteries are old. Please replace them with new batteries.
• Do not leave this toy in extremely hot or cold areas, humid or dusty areas or in direct sunlight.

DINO-MITES W1 22102/3/4/5-4000-PR 7/05

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WWW.WILDPLANET.COM
©2005 Wild Planet, Inc.
P.O. Box 194087 San Francisco, CA 94119-4087

©2005 Wild Planet Toys, Inc., San Francisco, CA 94104 U.S.A. All Rights Reserved. **MADE IN CHINA.**
Manufactured under license from Sega Toys Co., Ltd.

Ages 4 and up

DINO-MITES™

Owner’s Manual

GRRR! Meet the Dino-Mites!
Dino-Mites are tiny (but fierce) prehistoric creatures that want to play with you!

BeekBeek™

Tricki™

Eggbert™

Trextor™

www.dino-mite.com

Important: Please save this instruction sheet. It contains valuable product information.

Let’s wake up your Dino-Mite!
Make sure batteries are installed. (see “Battery Information”)

Press either button twice, quickly, and a melody will play. Your Dino-Mite is awake!

If your Dino-Mite goes to sleep by itself, press either button again twice in order to wake him up.

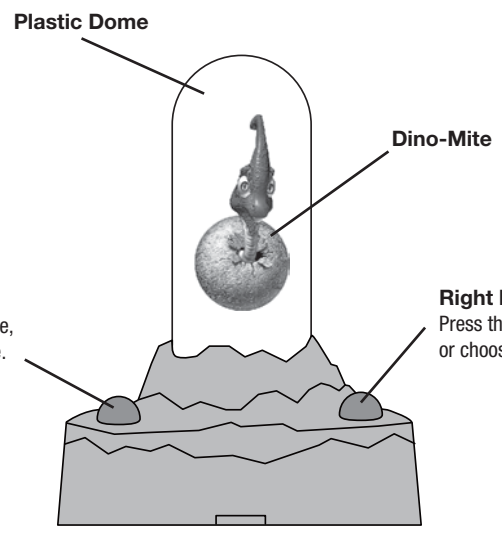

Left button:
Press this to feed the Dino-Mite, or choose left during the game.

Right button:
Press this to play with the Dino-Mite, or choose right during the game.

Can you tame him?
Your Dino-Mite is a ferocious and unpredictable beast, but you can control him if you try. There are two ways to interact with your Dino-Mite:

Feed him
Feed by pressing the left button. Feed him well and he will burp and fart with delight…but don’t feed him too much or he’ll barf!

Play with him
Play with him by pressing the right button. Play with him a lot! You can tell he likes attention!

Hint
To silence your Dino-Mite and put him to sleep, hold both buttons down for 3 seconds.

Your Dino-Mite gets lonely!
When left alone for a while, your Dino-Mite will call out for attention by hopping around impatiently and making sounds. Is he hungry…or does he want attention? You need to guess!
• If he does not receive the correct action, he will twitch his body right and left indicating “no.”
• If he receives the correct action, he will bob up and down to indicate “yes.”
If you give your Dino-Mite what he desires, he may play a song, or begin his favorite game.

Music soothes the savage beast!
Your Dino-Mite knows several different songs! See if you can get him to play all of them. He knows a “secret song” too…can you discover it?

Your Dino-Mite plays games, too!
Let your Dino-Mite sit for a few seconds. He will grunt three times and bob up and down. He wants to play!

You need to guess what he wants. But if you guess wrong, your Dino-Mite will be very upset! If you think he wants to sing and dance, press the left button. If you choose correctly, you will be rewarded with a song and dance. If you think he wants to play a game, press the right button. If you choose correctly he will bob up and down excitedly and start the game.

Your Dino-Mite’s favorite game is Simon Says. When you hear the “gong” sound, he will dart in several directions. You must watch carefully, then press the left or right buttons in the same sequence.

If you get it right, you win and advance to the next level! If you make a mistake, you have to start over, and your Dino-Mite will not be happy with you! You win if you follow the same sequence as your Dino-Mite. It will play songs and dance for you in joy!

If you ignore your Dino-Mite, he will fall asleep.
The Dino-Mite will try to get your attention, but if you do not respond, a “good night” song will play and he will take a nap.

Cheat Code
To jump directly to game mode at any time, hold the right button down for 3 seconds.

Enjoy your Dino-Mite!

To learn more about Dino-Mites go to
www.dino-mite.com